

Installing your new Soft Touch Valve Rebuild Kit ... with the long-life *Deep-Dish Teflon Disk*

Read completely first

You don't need to remove the trigger valve from the wand to do this procedure.


Just lay down a towel and rest your wand on it with the Hex Cap up.

- Unscrew the Hex Cap and toss the old spring and stainless ball.
- Install the new oring onto the Hex Cap (the handy Oring Puller Tool makes this easy).
- Use needle nosed pliers to pull out the old stem. Discard the old stem, old Teflon disk and metal washer.
- Install the new stem (use Super Silicone for lube). Check to see that the stem & lever move together.
- **Next is an important step for 'seating' your Deep Dish Teflon disk correctly.**


We will use the Hex nut Cap to 'seat' the Teflon disk. Do it right and you will have a long lasting seal. Do it wrong, and your jets will drip.

Procedure: Press the concave end of the Teflon disk into the → Hex nut Cap then screw the Hex Cap in place hand tight (without the ball & spring).

Now, unscrew the Cap you will notice that you have correctly seated the Teflon disk.

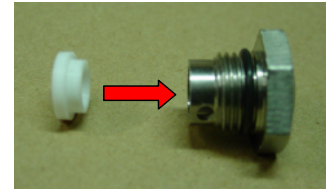

Deep Dish → Hex Cap

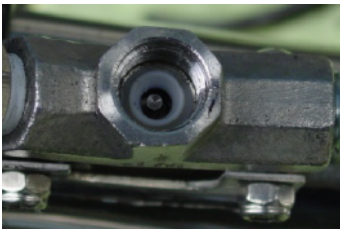

Now, finish the installation...

- Use needle nosed pliers to push the stem downward.
- Drop the stainless ball into the *Deep-Dish* (don't need to be Larry Bird to make this shot).
- The new spring goes in last.
- Reinstall the Hex Cap and you are done.

You should now be drip-free again.

Don't forget, you need a healthy valve up top and the Stubby Check valves in your jets to be totally drip-free.

Non-corrosive rinse agents help keep your wand drip-free.

www.realcleaners.com I'm here for you, **Joe 877 926-3377**

