




Notice the preferred position of the thermometer, nestled under the upper bend of the wand.


Installed this way, it is easy to view yet protected from bumps.

To install Thermometer, put the T-fitting in a strong vice and install the fittings provided into the ends.

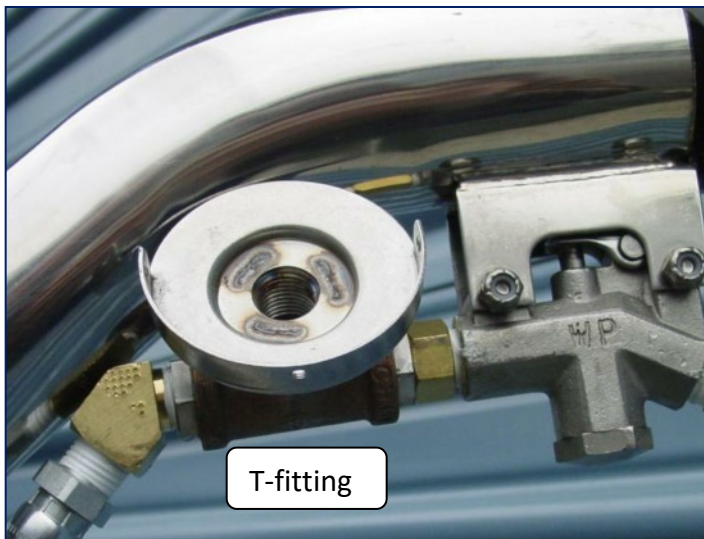

T-fitting

Next, remove the trigger valve and screw it into the back of the T-fitting Line the whole assembly up with the back screw of the hanger to check the fit.

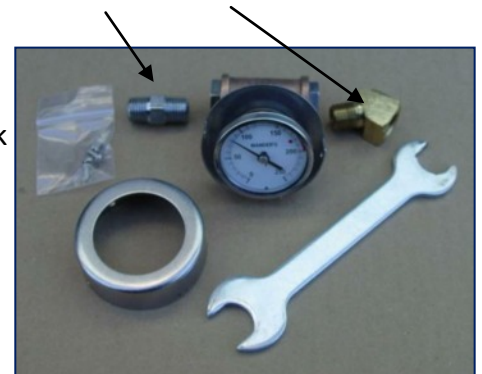

Install the assembly then use the wrench provided to rotate the thermometer as desired. Use the small screws to secure the thermometer cover to the housing.

Connect the quick disconnect at the bottom end of the supply tube to its mate at the spraybar then thread the upper end of the supply line into the front of the T-fitting.

